


**CONSTRUCTION NOTES:**

- Strike control joints every 4'-0" and place expansion joints every 16'-0".
- Install 1/2" preformed expansion joint material at all expansion joints and where sidewalk abuts concrete curb, foundations, aprons, or other concrete structures.
- All concrete construction shown on these standard details shall use 3000 P.S.I. SHA Mix No. 2 concrete unless otherwise specified.
- All storm drain structures shall be underlain with a minimum 6" clean crushed stone base.

APPROVED:

DIRECTOR

DATE

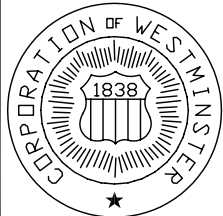

No.	REVISIONS	DATE

CITY OF WESTMINSTER  
DEPARTMENT OF PUBLIC WORKS  
STANDARDS FOR SIDEWALK & ENTRANCE CONSTRUCTION

**CURB & SIDEWALK RECONSTRUCTION  
SIDEWALK AGAINST CURB**